

# Installation Guide

Camera Interface for New Mercedes-BENZ NTG 4.5 4.7

Model Name	MB-NTG45 - PAS-MB-426F			
Released Date	2021-04-15			
Manual Version	1.1			
Language	English			



# **Contents**

1.Warning	3
2.Compatibility	5
3.Features	6
4.Specifications	7
5.Package Components	8
6.Wiring Diagram	9
7.DIP Switch Settings	
8.Operation Instruction	
9.DVR Switching	16

# ✓ Warning:

- In order to protect the driving safety and avoid break the traffic law; please DO NOT operate the interface while driving.
- The reversing surveillance function just is used in reversing assistance. Please check the entire surroundings while reversing.
- All steps of installation should be done by the well-trained specialist.
- During installation, the ignition key should be taken off and after all installation finished, connect power cable last.
- Please DO NOT plug or pull the connected cables in the state of power-on, in order to avoid damaged monitor or accessory.
- Install wiring in a manner in which cables will not come in contact with metal parts. The wiring may be damaged by contact with metal parts, resulting in fire and shocks. Avoid all contact with hot surfaces when wiring the main unit. High temperatures may damage wiring, causing shorts, arcing and fires.
- Please DO NOT put the product in the damp environment or water, in order to avoid electric shock, damaged and fire

accident caused by a short circuit.

- Kindly check all components are in the box when receiving the product. If anything missing, inform to the supplier/manufacturer.
- Start the engine before loading, check the interface whether have function displayed, key control whether correct, the
  vehicle interface whether having a scratch. Please give the feedback to the supplier/manufacturer if there have any
  questions.
- Please note that put the disassembled automotive components in a good way on the installation process, avoid scratching the instrument panel, the leftovers of connecting cables need to handle and DO NOT leave it in the car. The connecting plug must be insulated in order to short circuit.
- The cables should be connected in a good way, the vehicle installation space is a little small, so reduce space usage as far as possible. There should be a good plan about connect cables, avoid affecting the active component of connecting, such as control components of turning the steering wheel, throttle and brake pedal. There need to be fastened after connecting cables in case of a drop.

# 2.Compatibility:

Brands	Model	Production Year	Original System
Mercedes-Benz	A Series	2010-2015	
	B Series	2010-2014	
	C Series	2010-2014	
	GLK Series	2010-2014	NTG 4.5 4.7 system, 5.8"/7" OEM monitor
	ML Series	2010-2014	
	E Series	2010-2014	
	GLA Series	2015	

#### 3.Features:

- A. Support Intelligent Parking Assist System including PDC (Parking Distance Control) and FPG (Flexible Parking Guidelines)
- B. Support further software update by TF Card
- C. Support power supply for rear view camera
- D. Support power supply for DVR device
- E. Support automatically switched to front view camera, auto trigger after R to D gear

### 4. Specifications

A. Interface I/O Spec:

Input: CVBS \*3 (Front/Rear View Camera, 360, Video), VGA \*1 (Specific 360 Panoramic System)

**Output: LVDS Output** 

**B. Power Spec:** 

**Input Power: 9V-16V** 

**Consumption: 6W** 

**C. Package Content:** 

Interface Unit \* 1

**Main Power Harness \* 1** 


LVDS Cable \* 1

# **5.Package Components**



**Main Unit** 


Dimension: 143\*102\*26 mm

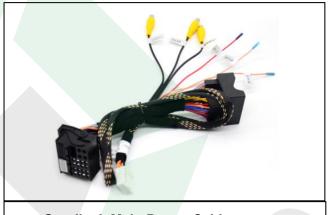


**Quadlock Main Power Cable** 



#### **6.Wiring Diagram**

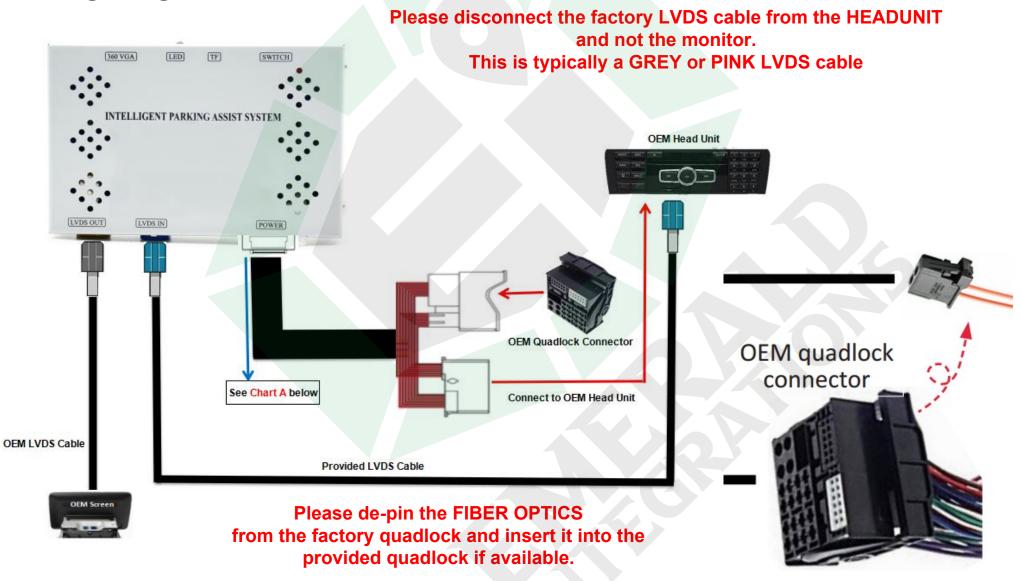

### Chart A ↓

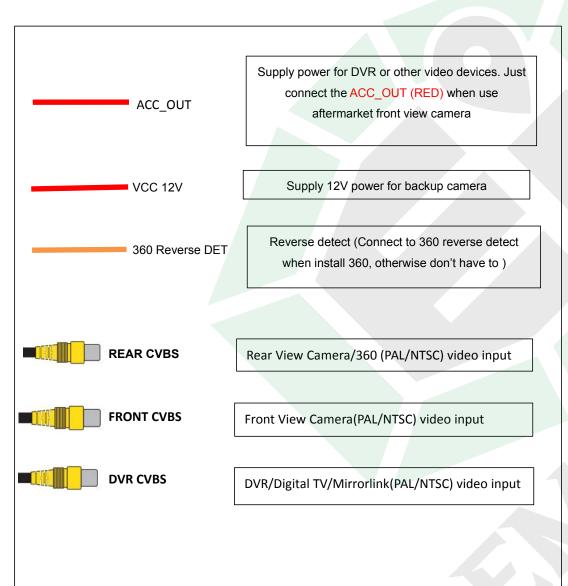

**Use this for REAR CAMERA POWER** 

**Use this for FRONT CAMERA POWER** 

# 7.DIP Switch Settings



PIN	ON(▼)	OFF(▲)		
1				
2	Selection of car models			
3				
4	Turn off PDC	Turn on PDC		
5	Turn off dynamic parking guideline	Turn on dynamic parking guideline		
6	Turn on DVR	Turn off DVR		
7	Turn on front view	Turn off front view		

Models	NO.1	NO.2	NO.3
2010-2014 5.8 inch A/B/C/GLA/GLK/GLS	<b>(\\)</b>	<b>(\( \)</b>	<b>(\( \)</b>
2010-2014 7 inch ML	(▼)	<b>(\)</b>	<b>(\\)</b>
2010-2014 7 inch E	<b>(\( \)</b>	(▼)	<b>(\)</b>

# \* Dip Switcher Settings ${\rm II}\,$ (Quick Setting) :


Mode	4	5	6	7	8
aftermarket camera CAN mode valid	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)
aftermarket camera CAN mode invalid	ON(▼)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)
original camera	OFF(▲)	ON(▼)	OFF(▲)	OFF(▲)	ON(▼)

# 8. Operation Instruction

• Note: Please use the protective measures, avoid damaging the original car accessories



1. Please press the red circle position

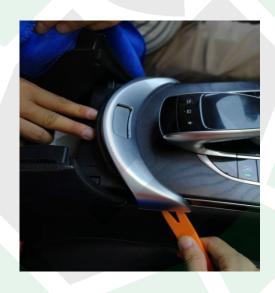

2. Open the silver button panel




3. Remove the two screws



4. Hold up with both hands, the center stack will appearance.




6.Remove the screws from head unit

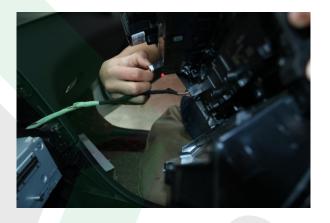

5. Plug the LVDS cables from the head unit



7. Connect to the power cables from head unit

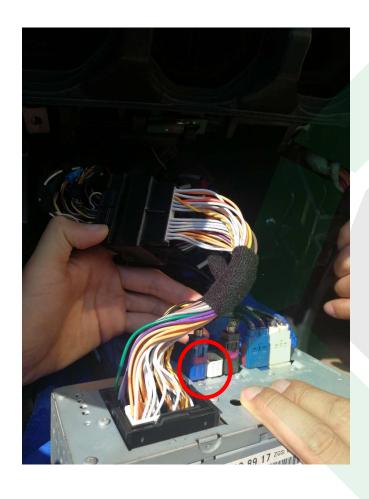



8.Connect to the blue LVDS socket from OEM head unit

9. Plug the blue LVDS cables from OEM head unit, then connect to the LVDS OUT of camera interface box.

# 9. DVR Switching



Please put on (▼) the dip switch No.6, turn on the DVR, then long press 2 seconds to enter DVR by press hang up button on steering wheel.

