

# PCJ-CDR3.1 wiring diagram


## 1 DIP settings (factory settings code: **688668**):

11-15 Porsche with CDR3.1	1=ON,2=ON,3=ON,6=ON,7=ON
---------------------------	--------------------------




Main menu

## 2 Wiring diagram

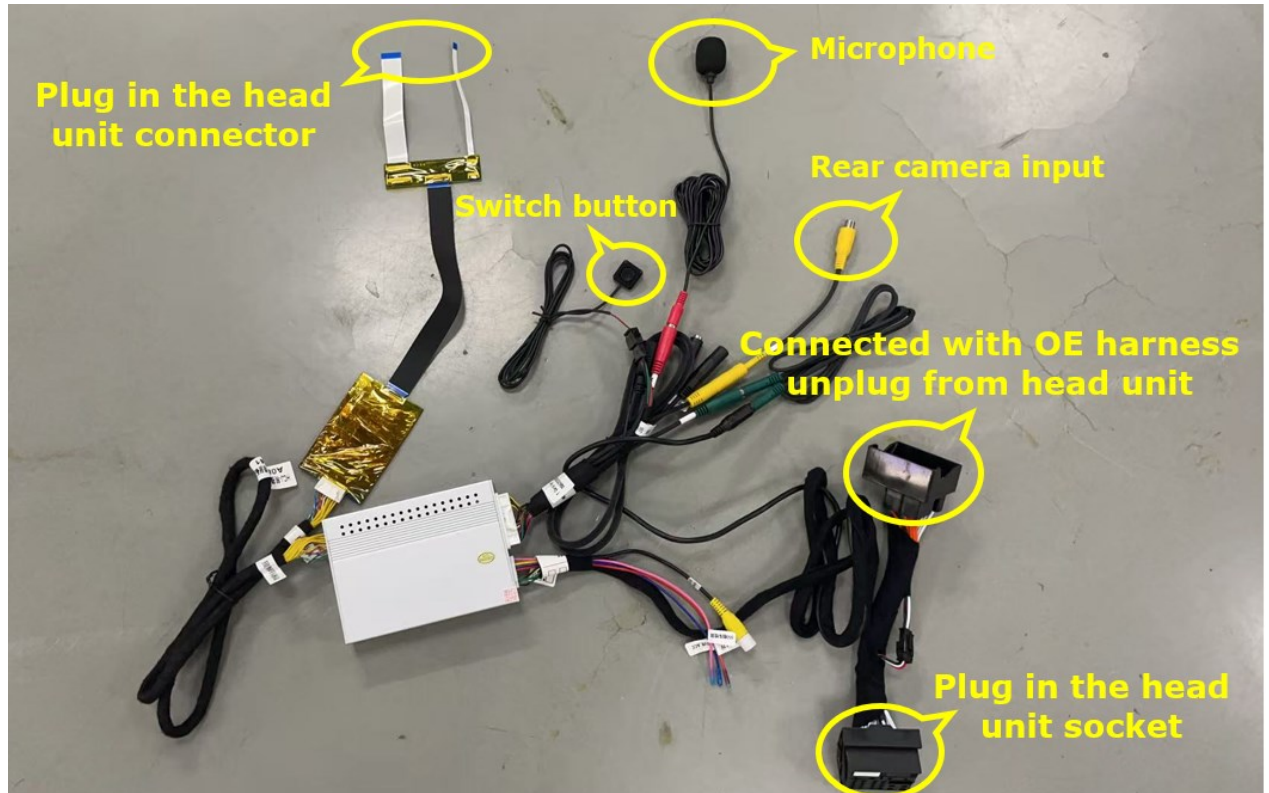

**2.1 Move the whole frame and take off the screen and disassemble the head unit, attention the OE ribbons**

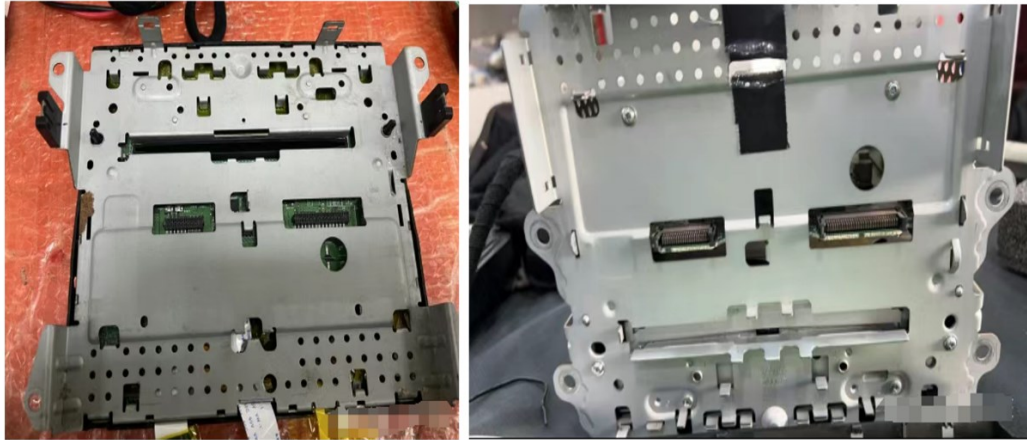

**2.2 Move the OE ribbon and replace it by the provided ribbon, install the provided board**



**2.3 Put the insulation tape on the provided board and fix it.**



### **3 Switch button:**

**Press hazard warning button twice to switch or press provided button to switch.**

**4 Pair the Bluetooth, and then it will connect automatically.**