

Factory Connect Camera System: Ram Truck
 1500/2500/3500 Equipped with 5" or 8.4" Screen

1

NOTES:

This camera requires activation by a Chrysler/Dodge Dealer. See reverse for Dealer Programming instructions. If possible, it is advised to have the Dealer "enable" the camera option prior to installation.

Camera must be connected to Ignition, not reverse power

2

Remove existing tailgate handle. Transfer lock mechanism. Mount FC tailgate handle with camera. Route camera cable forward into the cab.



PARKING GUARD LINE OPTION:
1. DEFAULT SET UP: ON,
2. CONNECTING THIS WIRE OFF

3 **Remove Radio / Screen**

Remove bezel from around shifter and remove two Philips screws under rubber mat and remove bezel around cup holders.


Remove rubber mat on top of screen and remove the two T20 screws.

Remove rubber mat in square cubby hole and remove the T20 screw and remove the radio bezel.

Remove the four 7mm screws holding in screen to access the black 52 pin plug at rear of screen (only black plug at screen) unplug all wiring going to rear of screen and set aside.

4

Connect camera Red wire to suitable ACC or IGN +12V. Ground camera Black wire.

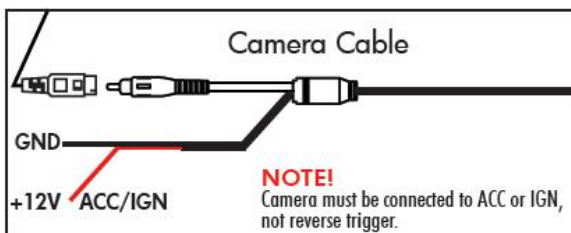

NOTE!
Camera must be connected to ACC or IGN, not reverse trigger.

* We recommend powering the camera at 12 Volt Receptacle

5 **Connect Factory Connect Harness**


Locate pin positions 31 & 32 on 52 pin plug removed from back of radio. From supplied RCA harness, insert YELLOW Lead into pin position 31 and Black Lead into pin position 32. Connect RCA to camera. Reinstall all plugs into back of radio.

Test & Reassemble

After all connections are made and vehicle is programmed, start vehicle and place in reverse to activate camera and display.

Reassemble.

6

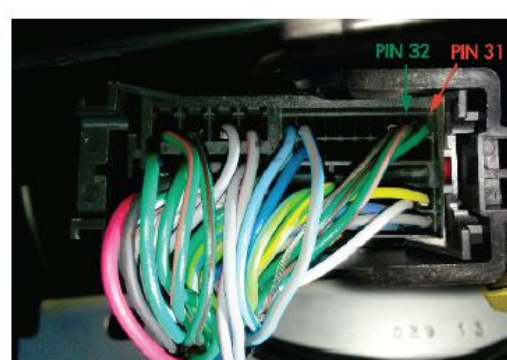

This camera requires activation by a Chrysler/Dodge Dealer. See reverse for Dealer Programming instructions.



Model: FC-DRAM

Dealer Programming Instructions

PARK VIEW REAR BACK-UP CAMERA VEHICLE CONFIGURATION

Vehicle VIN must be updated with the sales code of the added accessory in order to enable system functionality. Using the DealerCONNECT website and the scan tool, complete the procedure below:

1. Log on to <https://dealerconnect.chrysler.com>
2. In the "Vehicle Option" screen under the "Global Claims System" category in the "Service" tab, enter the VIN and add the sales code **XAC (PARK VIEW REAR BAC-UP CAMERA)** as a "Dealer Installed Option".
3. Confirm that the new sales code has been successfully added to VIN
With the scan tool connected to both the internet (via Ethernet port or wireless connection) and the vehicle, follow the steps below:
4. Using the scan tool select the **VEHICLE PREPARATION** and then select **RESTORE VEHICLE CONFIGURATION**.
5. Follow the step by step instructions on the scan tool to complete the Park View Rear Back-Up Camera vehicle configuration.